

Wireless Boombox

User's Guide for Model BCB117 v1823-01



FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** Shock hazard - Do Not Open.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **Warning:** Do not ingest battery, chemical burn hazard.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.
- **WARNING:** This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

 
Features & Controls

Features

- Built-in stereo speakers
- Supports Bluetooth
- Wireless range: 60 ft.
- CD player: supports CD, CD-R/RW
- Programmable tracks
- AM/FM radio with built-in antennas
- Aux In (3.5mm audio input)
- Analog volume control
- Red LED display
- AC Power: requires AC Power Cable (included)
- DC Battery Power: requires 6 C batteries (not included)

Includes

- AC Power Cable
- User's Guide

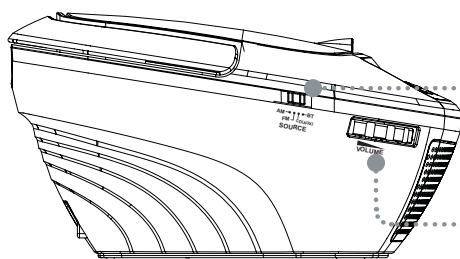


Carry Handle

CD Door

Source
AM/FM/CD (Aux)/
Bluetooth

 Volume Dial

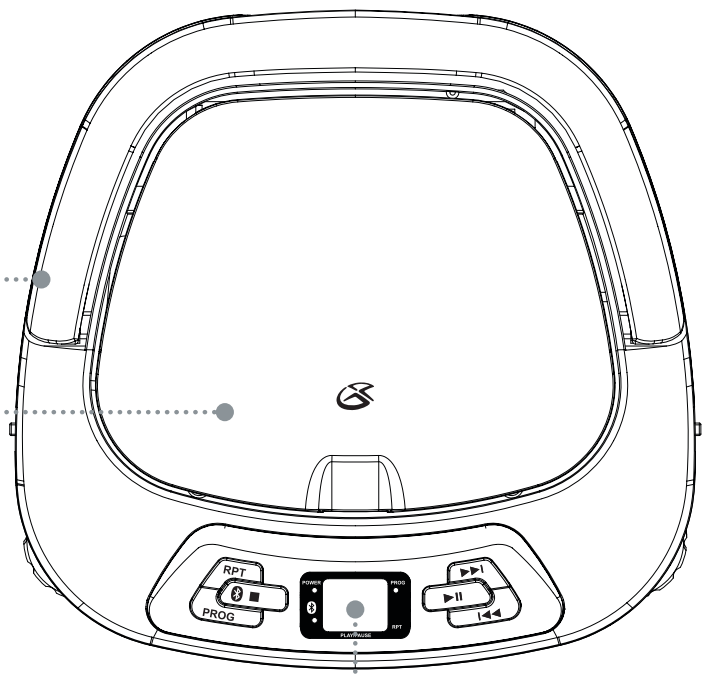

Display

Controls

 
RPT (Repeat)
Press to repeat a single track or the entire album.

Pair Bluetooth/Stop

PROG (Program)
Press to program tracks to play in a specific order.

Play/Pause

Skip Fwd/Rev.
Press to skip between tracks on a CD.
Press and hold to search through a single track.

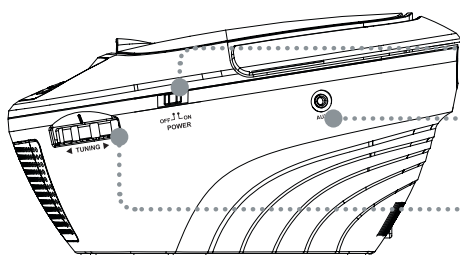

Power
ON/OFF


Aux In

Tuning Dial

Power


AC Power Cord

 For power, plug the power cord into the power port on the rear or the boombox and a standard power outlet.

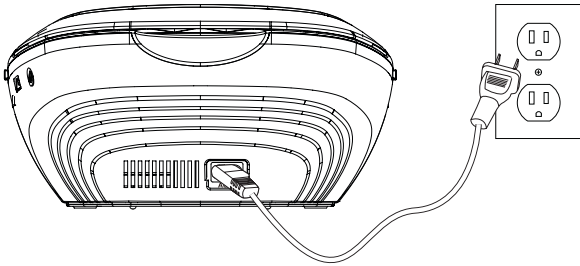

Battery Power

 For battery power, this unit requires 6 C sized batteries (not included).

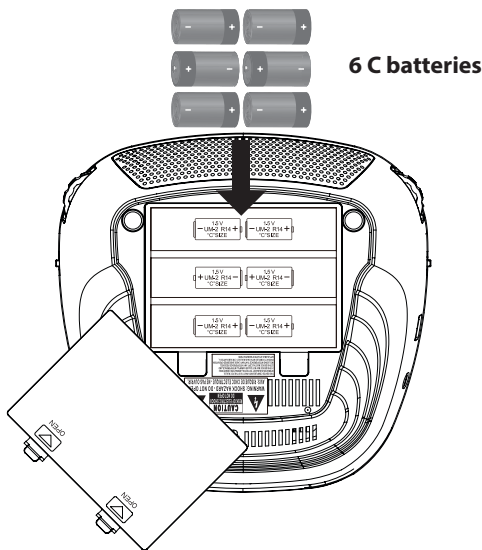

Bluetooth Wireless

Pairing to a Bluetooth Device and Playing Audio

1. Adjust the boombox's **Source** to **BT (Bluetooth) mode**. A blue light will flash on the display next to the Bluetooth symbol. If the boombox does not automatically begin to pair, press the Bluetooth button. *When pairing, remain within 3 feet of the unit.*
2. Using the controls on your Bluetooth device, select **BCB117** from your Bluetooth settings to pair. When successfully paired, the blue light on the display will turn solid and an audible chime will sound from the unit. *If your device requests a password, enter the default password **0000**. You can refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
3. Audio played through the connected Bluetooth device should now be heard through the speakers. Use the controls on the connected Bluetooth device to select and begin playing audio. Play, pause or skip audio using the controls on the device or the boombox.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or if any pairing issues should occur, un-pair the unit on your Bluetooth device and follow these steps again.

Playing Audio

Loading and Playing a CD

1. Open the CD door and place a CD in the boombox, label side facing up.
2. Close the CD door.
3. Adjust the boombox's **Source** to **CD mode**.
4. Press the **Play/Pause** button to begin playing the loaded disc.

Programming a CD

1. Press the **Stop** button to stop a loaded CD.
2. Press the **PROG** button. "01" will blink on the display.
3. Press the **Skip Fwd/Rev** buttons to select a track.
4. Press the **PROG** button to add the selected track to the program. Repeat this process to program up to 20 tracks to play in a specified order.
5. Press the **Stop** button to cancel a program.

Playing the AM/FM Radio

This unit is equipped with internal AM/FM radio antennas. To improve radio reception, adjust the position of the unit.

1. Adjust the boombox's **Source** to **AM or FM mode**.
2. Adjust the **Tuning Dial** to the desired frequency band.
3. Turn the **Volume** dial to turn on the radio and adjust to the desired volume.
4. Adjust the **Tuning** dial to tune the radio.

Aux In

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the **Aux In on the unit** and an **audio output** on an MP3 player or other audio source.
2. Adjust the boombox's **Source** to **CD (Aux) mode**.
3. Use the controls on the connected MP3 player or other audio source to begin playing audio through the boombox.

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | **Email Support:** prodinfo@dpiinc.com | **Email Parts:** partsinfo@dpiinc.com

Copyright © 2016 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

