



C502B Clock Radio with Dual Alarm

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or bottom of the apparatus.
Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.
- The marking information is located at the rear or bottom of apparatus.
Le marquage est situé sur le panneau arrière ou inférieur de l'unité.

WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
 - **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
 - **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
 - **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
 - **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 - **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
 - **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
 - **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
 - **PRÉCAUTION:** Danger d'explosion si les piles sont remplacées de façon incorrecte. Remplacer les piles seulement par le même type de pile ou l'équivalent.
 - **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
 - **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
 - **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
 - **WARNING:** Shock hazard - Do Not Open.
 - **AVIS:** RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- La prise du secteur est utilisée pour déconnecter le système.*
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

 


This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Introduction and Setup

Power


Plug the included AC/DC power adapter into the **DC POWER INPUT** on the dock and an AC power outlet to power the dock.

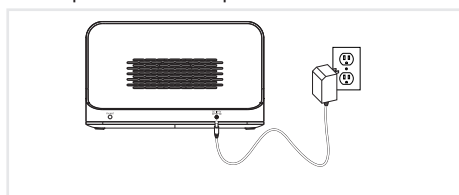

Battery Backup

The battery backup is intended for short power outages only. The clock radio's primary functions cannot run off of the battery backup alone.

 
Requires 2, AA-size, batteries (not included)

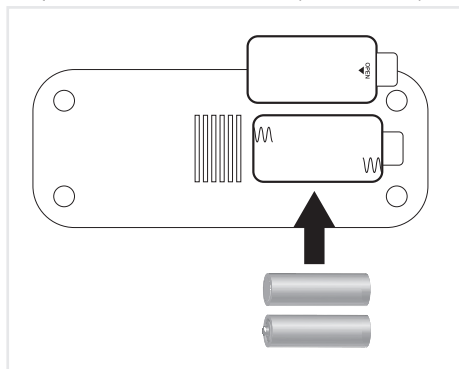

Tune-/Hour
Press to tune the radio.
Press to adjust the hour when setting the clock or an alarm.

Preset/Auto
In radio mode, press to cycle through preset radio stations.
Press and hold to autosave preset channels.

 Power/AM/FM
Press and hold to turn off the radio.
Press to turn on the radio and switch between AM and FM radio modes.

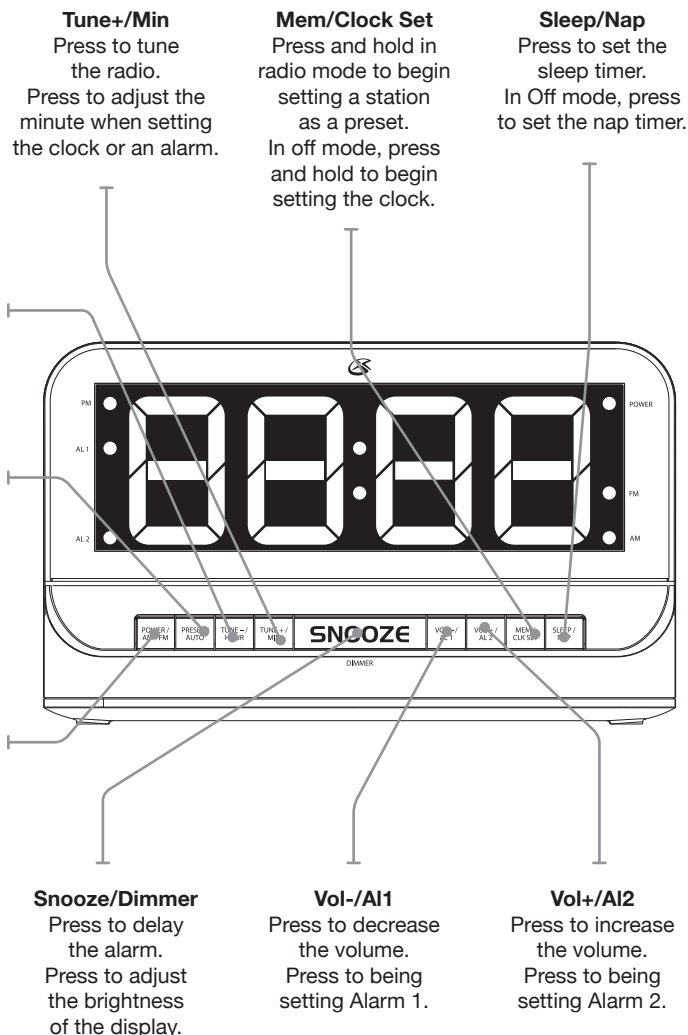

Clock & Sleep/Nap Timer

Setting the Clock

1. If in radio mode, press and hold the **Power/AM/FM** button to turn the unit off.
2. Press and hold the **Mem/Clock Set** button until the display begins to blink, then release the button.
3. Press the **Tune-/Hour** button to adjust the hour.
The PM indicator will light when the hour is set in the PM.
4. Press the **Tune+/Min** button to adjust the minute.
5. Press the **Mem/Clock Set** button to finish setting the time.

Setting the Sleep Timer

1. Press the **Sleep/Nap** button repeatedly to set the sleep timer (120, 90, 60, 45, 30, 15 min or OFF).
2. Once the set sleep time has expired the clock radio will automatically power off.

Setting the Nap Timer

1. Press the **Power/AM/FM** button to turn the clock radio on.
2. Press the **Power/AM/FM** button again to switch between AM and FM radio mode as desired.
3. Press and hold the **Power/AM/FM** button to turn the unit off.
4. Press the **Sleep/Nap** button repeatedly to set the nap timer (120, 90, 60, 45, 30, 15 min or OFF).
5. Once the set nap time has expired the unit will begin playing the radio.

Alarm

Setting the Alarm

1. If in radio mode, press and hold the **Power/AM/FM** button to turn the unit off.
2. Press and hold the **Vol-/AI1** or **Vol+/AI2** button until the display begins to blink, then release the button.
3. Press the **Tune-/Hour** button to adjust the hour.
The PM indicator will light when the hour is set in the PM.
4. Press the **Tune+/Min** button to adjust the minute.
5. Press the **Vol-/AI1** or **Vol+/AI2** button repeatedly to switch between Buzzer, AM radio, FM radio or Off.
When setting to Buzzer, only the alarm indicator will be lit.
6. Once the set alarm time is reached, the alarm will sound.
When the alarm is set and active, the AI 1 or AI2 Indicator will be lit.
To set the other alarm, follow the above steps and choose the alarm not currently set.

Cancelling the Alarm

1. Follow the instructions for Setting the Alarm.
2. Press the **Vol-/AI1** or **Vol+/AI2** buttons repeatedly until the indicator is no longer lit.

Snooze and Alarm Reset

After the alarm sounds:

Press the **Snooze/Dimmer** button to delay the alarm for several minutes.

OR

Press the **Power/AM/FM** button to turn the alarm off until the set alarm time is reached again.

Radio

Tuning the AM or FM Radio

1. Press the **Power/AM/FM** button to turn the clock radio on.
2. Press the **Power/AM/FM** button again to switch between the AM and FM radio mode.
3. Press the **Tune+/Min** and **Tune-/Hour** buttons to adjust the radio to the desired frequency.
4. Press and hold the **Tune+/Min** and **Tune-/Hour** buttons to search for the next available frequency.
5. Press the **Vol-/AI1** or **Vol+/AI2** buttons to adjust the volume.
6. Press and hold the **Power/AM/FM** to turn the radio off.

Saving a Station as a Preset

1. Follow the instructions for Tuning the AM or FM Radio.
2. Tune to the desired station.
3. Press and hold the **Mem/Clock Set** button to save the current radio station as a preset.
4. Press the **Preset/Auto** button to select a preset number (Ex. PO1, PO2...).
5. Press the **Mem/Clock Set** button to save the current radio station as a preset.

Autosaving Preset Radio Stations

1. Follow the instructions for Tuning the AM or FM Radio.
2. Press and hold the **Preset/Auto** button.
3. The unit will scan for an available station, and save it as a preset. It will then scan for the next available station, and set that as the next preset, continuing until up to 10 stations are saved as presets.

Tuning to a Preset Radio Station

1. Follow the instructions for Tuning the Radio and Saving a Station as a Preset.
2. Press the **Preset/Auto** button to cycle through preset radio stations.

Radio Reception

Adjust the position of the **FM Antenna** to improve FM radio reception.

An AM antenna is built into the clock radio. To improve AM radio reception, adjust the position of the clock radio.



International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.gpx.com