

# CD Clock Radio

User's Guide for Model CC314B v958-02



## Important Safety Instructions

- Read these Instructions.
- Keep these INSTRUCTIONS.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/appliances combination to avoid injury from tip-over.



## FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT; FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- **AVIS:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radio frequency exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **AVIS:** Danger d'explosion si les piles sont remplacées de façon incorrecte. Remplacer les piles seulement par le même type de pile ou l'équivalent.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS:** Risque de choc électrique - ne pas ouvrir.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- Objets remplis de liquides, comme des vases, ne doivent pas être placés sur l'appareil.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or bottom of the apparatus.
- Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.
- The marking information is located at the rear or bottom of apparatus.
- Le marquage est situé sur le panneau arrière ou inférieur de l'unité.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- La prise du secteur est utilisée pour déconnecter le système. La prise du secteur ne doit pas être débranchée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Ne pas mélanger vieilles et nouvelles batteries.
- Completely replace all old batteries with new ones.
- Remplacer complètement toutes les piles par des nouvelles.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Ne mélangez pas des piles alcalines, standard (carbone-zinc) ou rechargeables.

- (Ni-Cd, Ni-MH, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Piles doivent être recyclées ou éliminées selon les directives étatiques et locales.
- **WARNING:** This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.



**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

 


**DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.**

## FEATURES AND CONTROLS

### Power


To power the unit, plug the built-in AC Power cord into a standard wall outlet.

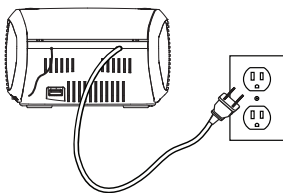

### Battery Backup

Requires 2, AAA-size, batteries (not included).


 
The battery backup is intended for short power outages only. The clock radio's primary functions cannot run off of the battery backup alone.

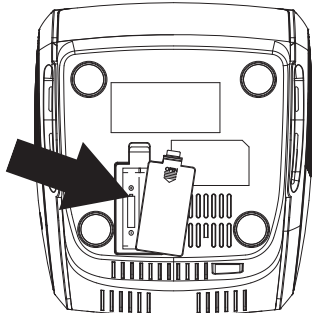

### Charging Connected Devices

Requires USB cable (not included).

  The USB Charging Port on the rear of the unit can be used to charge mobile devices as seen below.

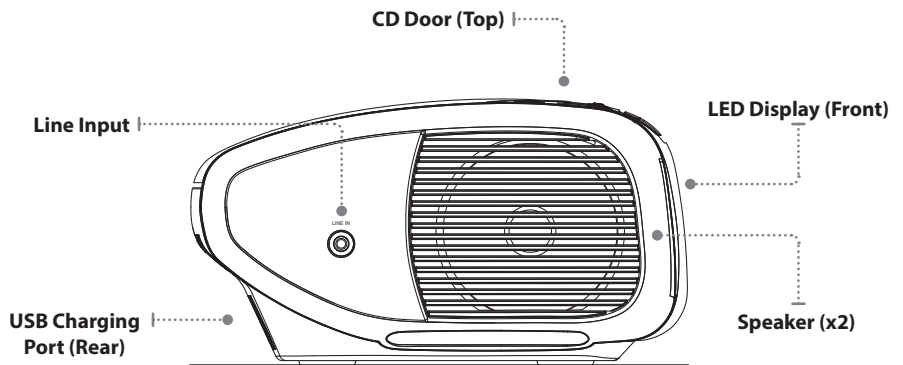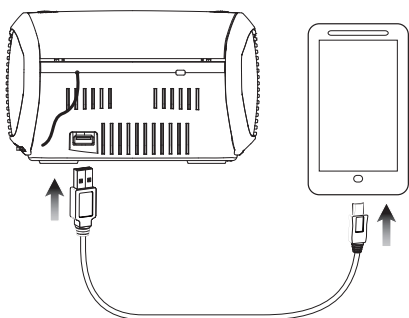

**Skip/Search/Tune +/-**  
Press to skip between tracks on a loaded CD. Press and hold search through the current track. In Radio mode, press to tune the radio. Press and hold to search for the next available station.

**Clock Set**  
In Off mode, press and hold to begin setting the time.

**Volume/AL1/AL2**  
Press to adjust the volume. Press & hold to begin setting Alarm 1 or Alarm 2.

**Open/Close**  
Press to open or close the latch on the CD door.

**Source**  
Press to switch between Radio, Line In, and CD modes.

**Repeat/Program**  
In CD Play mode, press to repeat the current track. Press twice to repeat the entire album. In CD Stop mode, press to program a loaded CD to play tracks in a specified order.

 
**Sleep/Random**  
In On mode, press repeatedly to set the sleep timer. In CD Play mode, press & hold to play tracks from a loaded CD in a random order.

**Display**  
Press to view the time in Radio or CD mode.

**Power**  
Press to turn the unit on or off.

**Stop/Presets**  
Press to stop a CD during play. Press & hold to begin saving the current station as a preset.

**Play/Pause/AM/FM**  
Press to play or pause a loaded CD. Press to switch between AM radio and FM radio.

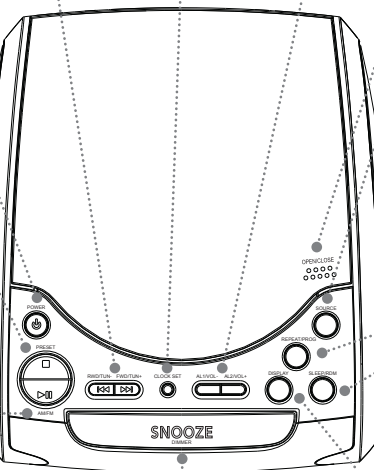

**Snooze/Dimmer**  
Press to delay the alarm for several minutes. Press to adjust the brightness of the display.

---

## CLOCK AND SLEEP TIMER

---

### Setting the Clock

1. Press the **Power** button to turn the unit off.
2. Press and hold the **Clock Set** button until the display begins to blink, then release the button.
3. Press the **Tune +/-** buttons to adjust the hour. *Note the PM indicator will light when the hour is set in the PM.*
4. Press the **Clock Set** button.
5. Press the **Tune +/-** buttons to adjust the minute.
6. Press the **Clock Set** button to finish setting the time.

### Setting the Sleep Timer

1. Press the **Power** button to turn the unit on.
2. Press the **Sleep/Random** button to set the sleep timer (90, 60, 30, 15 min or OFF).
3. Once the set sleep time has expired the clock radio will automatically power off.

---

## ALARM

---

### Setting the Alarm

1. Press the **Power** button to turn the unit off.
2. Press and hold the **AL1** or **AL2** button until the display begins to blink, then release the button.
3. Press the **Tune +/-** buttons to adjust the hour. *Note the PM indicator will light when the hour is set in the PM.*
4. Press the **AL1** or **AL2** button.
5. Press the **Tune +/-** buttons to adjust the minute.
6. Press the **AL1** or **AL2** button.
7. Press the **Tune +/-** buttons to switch between Buzzer, Radio and CD. The display will indicate the following:  
**rAd** for Radio, **bU** for Buzzer, and **Cd** for CD.
8. Use the **Vol+/-** buttons to adjust the volume of the alarm, except when set to Buzzer.
9. Once the set alarm time is reached, the alarm will sound.
10. To set the other alarm, follow the above steps and choose the alarm not currently set.

### Snooze and Alarm Reset

After the alarm sounds:

Press the **Snooze/Dimmer** button to delay the alarm for several minutes.

OR

Press the **Power** button to turn the alarm off until the set alarm time is reached again.

### Disabling the Alarm

Press the **AL1** or **AL2** button until the indicator is no longer lit. The alarm is not off and will not sound.

---

## LINE IN

---

### Using the Audio Input

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the **Line In Input** on the side of the unit and the **audio output** on an audio device.
2. Press the **Power** button to turn the unit on.
3. Press the **Source** button to switch to **Line In mode**.
4. Use the native controls on the connected device to play your audio through the unit.

---

## INTERNATIONAL SUPPORT

---

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at:

[www.gpx.com](http://www.gpx.com)

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en:

[www.gpx.com](http://www.gpx.com)

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur:

[www.gpx.com](http://www.gpx.com)

---

## CD

---

*Note: This unit is not compatible with MP3 CDs.*

### Loading and Playing a CD

1. Open the **CD Door**.
2. Place a CD into the unit, label side facing up.
3. Close the **CD Door**.
4. Press the **Source** button to switch to CD mode.
5. Press the **Play/Pause** button to begin playing the loaded CD.

### Programming a CD

1. Press the **Stop** button to stop the CD during play.
2. Press the **Program** button.
3. **"PROG"** will begin to blink on the display.
4. Press the **Tune +/-** buttons to select a track.
5. Press the **Program** button to save the selected track to the program.
6. Repeat steps 4 and 5 to program up to 20 tracks.

---

## RADIO

---

### Radio Reception

Extend the **FM Antenna** to improve FM radio reception. An AM antenna is built into the clock radio. To improve AM radio reception, adjust the position of the clock radio.

### Tuning the AM or FM Radio

1. Press the **Power** button to turn the unit on.
2. Press the **Source** button to switch to **Radio mode**, then press the **AM/FM** button to select the desired frequency band.
3. Press the **Tune +/-** buttons to adjust the radio to the desired frequency.
4. Press and hold the **Tune +/-** buttons to search for the next available frequency.
5. Press the **Vol+/-** buttons to adjust the volume.
6. Press the **Power** button to turn the radio off.

### Saving and Playing a Station as a Preset

1. Tune to the desired frequency.
2. Press & hold the **Preset** button.
3. The display will flash.
4. Press the **Tune +/-** buttons to set as P01 - P10.
5. Press the **Preset** to finish setting the station as a preset.
6. Press the **Stop/Preset** and **Tune +/-** buttons to cycle through preset radio stations.

