



USER'S GUIDE  
V:1340-0311-11



# HT219B

## DVD Home Theater System

---

For the most up-to-date version of this User's Guide, go to **[www.gpx.com](http://www.gpx.com)**

# Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.

- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS:** *RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

*La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.*

Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.  
*No mezcle baterías viejas y nuevas.  
No mezcle baterías alcalinas, estándar (carbóno-zinc) o recargables (ni-cad, ni-mh, etc.).*



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

# Important Safety Instructions

1. Read these Instructions.
  2. Keep these Instructions.
  3. Heed all Warnings.
  4. Follow all instructions.
  5. Do not use this apparatus near water.
  6. Clean only with a dry cloth.
  7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  11. Only use attachments/accessories specified by the manufacturer.
- 
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 

**Special note:** When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

## FCC Warnings

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
*L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*
  - Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
  - Caution marking is located at the rear or bottom of the apparatus.  
*Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.*
  - The marking information is located at the rear or bottom of apparatus.  
*Le marquage est situé sur le panneau arrière ou inférieur de l'unité.*
- 



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

## 5.1 CHANNEL HOME THEATER SYSTEM

### Features

- 5.1 Channel Speaker System 4:3/16:9
- Front-firing acoustically calibrated satellite speakers
- Subwoofer
- Built-in amplifier
- Drawer-load DVD player with amber LED display
- Plays DVD, DVD-R/RW, DVD+R/RW, CD, CD-R/RW
- Plays JPEG picture discs
- Multi-language OSD: On-screen display in English, French, and Spanish
- Supports multiple languages and language subtitles
- Fast-forward/fast-backward/slow motion/zoom
- TV display aspect ratio conversion:
- NTSC
- Progressive Scan
- Digital tune AM/FM radio
- Station memory presets - 20FM/20AM
- Composite video output
- Component video output
- 5.1 RCA audio output
- RCA auxiliary input
- Digital coaxial audio output
- S-Video output
- Wire clamp speaker jacks
- Full-feature remote control for DVD
- AC-Powered: Built-in AC cord

### Included

- HT219B
- 5 Satellite speakers
- 1 Subwoofer
- Remote control
- AM loop antenna
- FM wire antenna
- RCA A/V cable

 
 
### Total Power Output

 
Speaker Output (peak): Satellites: 45W x 5; Subwoofer: 150W; Total Output: 375W

## TABLE OF CONTENTS

|                            |           |
|----------------------------|-----------|
| <b>INTRODUCTION</b>        | <b>6</b>  |
| <b>SETUP</b>               | <b>8</b>  |
| <b>TELEVISION SETUP</b>    | <b>10</b> |
| <b>DVD &amp; CD</b>        | <b>12</b> |
| <b>SETUP MENU</b>          | <b>13</b> |
| <b>RADIO</b>               | <b>14</b> |
| <b>COMPANY INFORMATION</b> | <b>16</b> |

# INTRODUCTION

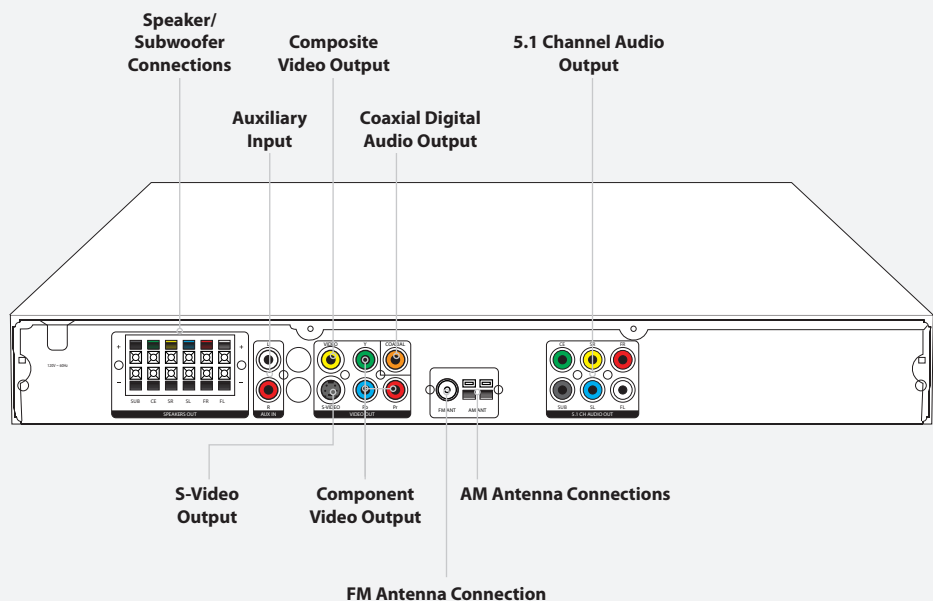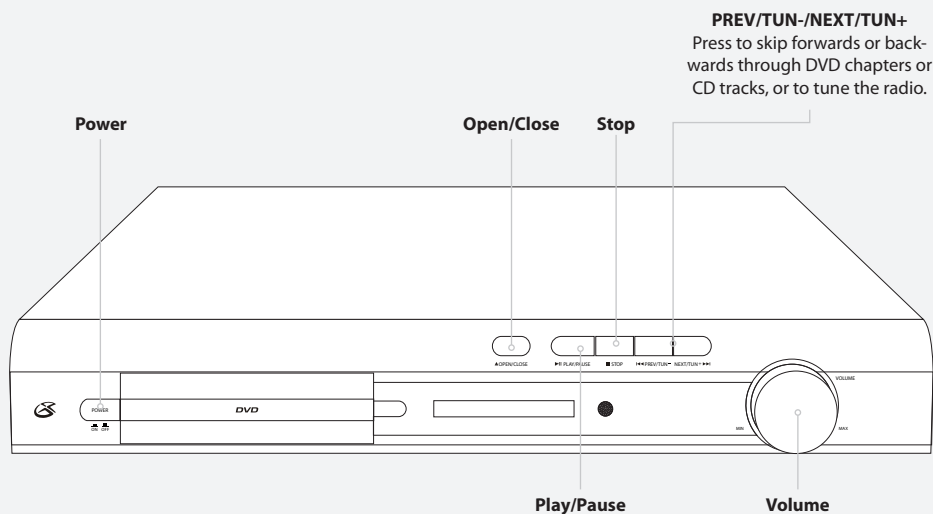

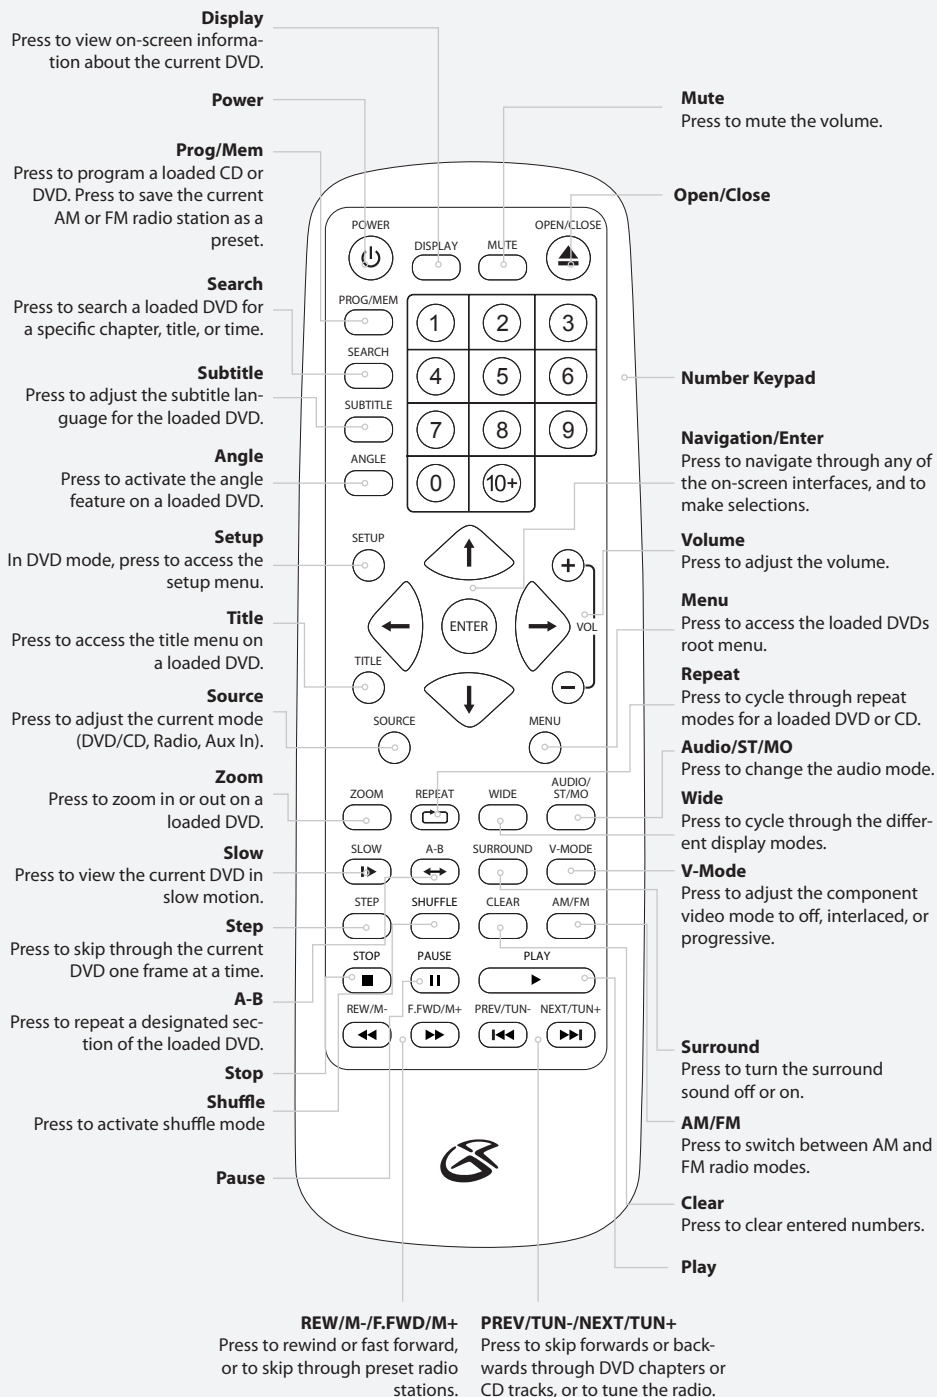

## SETUP

 
### Power

Plug the attached AC cord into a standard AC power outlet to power the home theater system.



### Subwoofer and Speakers


Plug the speaker and subwoofer cables into the corresponding colored **Subwoofer/Speaker Connections**.

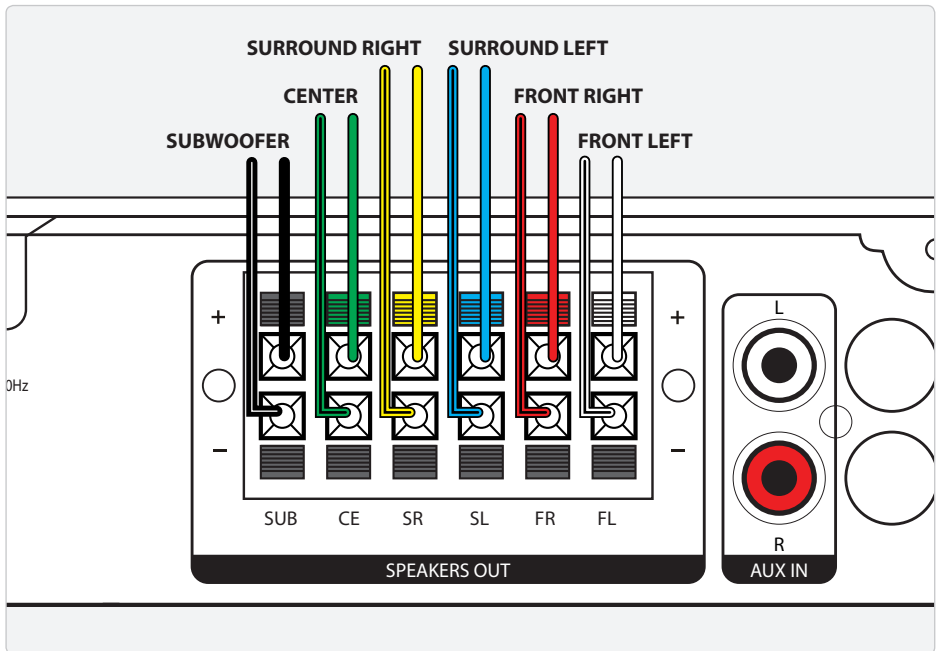

### AM/FM Antennas


Connect the two ends of the AM Loop Antenna wire to the AM Antenna Connection.

 Plug the FM Wire Antenna into the FM Antenna Connection.

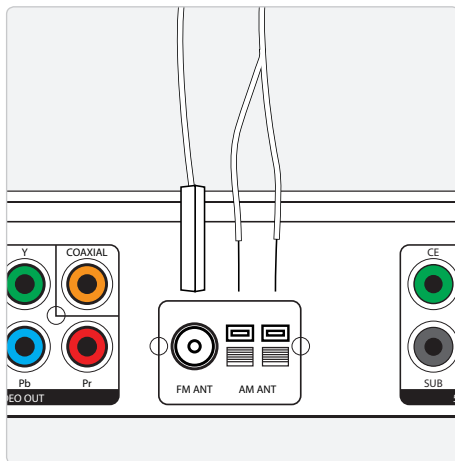

### Remote

 
Requires 2 AAA batteries (not included)

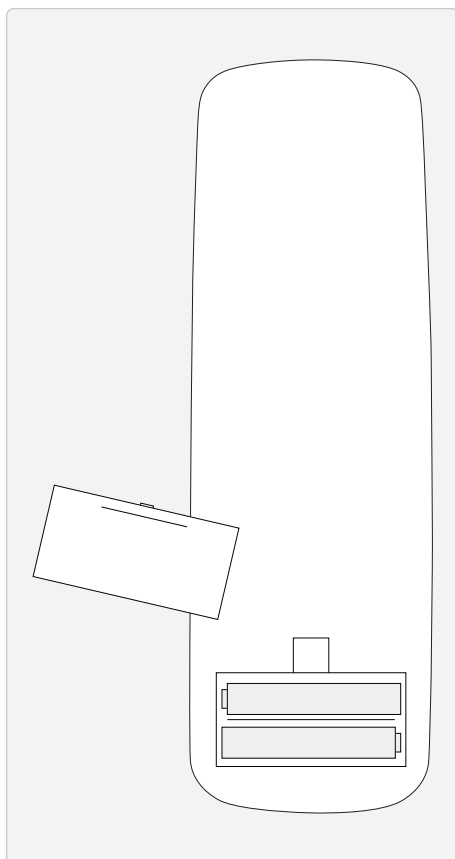

## TELEVISION SETUP


### Composite Video Setup (Good)

 - 1 Connect a composite RCA cable to the composite RCA input on a television.
- 2 Connect the other end of the composite RCA cable to the **Composite Video Output** on the home theater system.
- 3 Adjust your television to the input setting that matches the connection made in step 1.

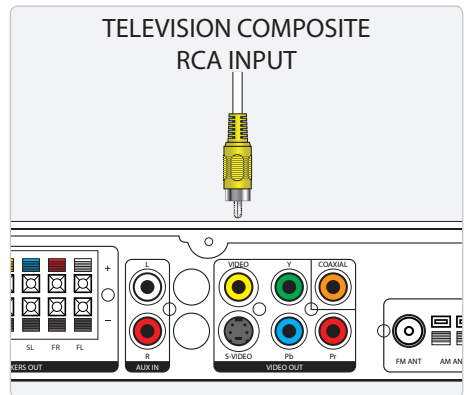


### S-Video Setup (Better)

 
- 1 Connect a s-video cable to the s-video input on a television.
- 2 Connect the other end of the s-video cable to the **S-Video Output** on the home theater system.
- 3 Adjust your television to the input setting that matches the connection made in step 1.

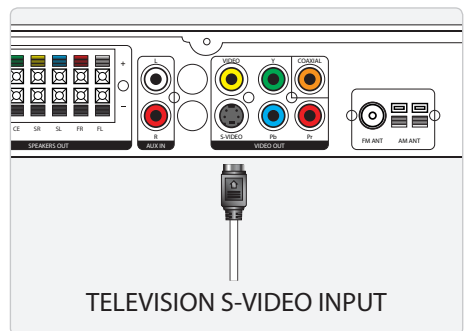

### Component Video Setup (Best)

  - 1 Connect a component video cable to the component inputs on a television.
- 2 Connect the other end of the component video cable to the **Component Video Outputs** on the home theater system.
- 3 Adjust your television to the input setting that matches the connection made in step 1.

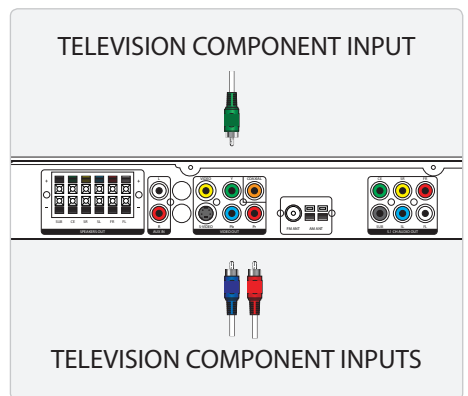

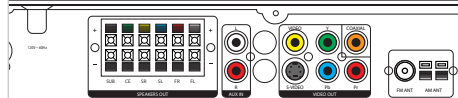

- 1 Connect a stereo RCA cable to the stereo RCA outputs on a television.
- 2 Connect the other end of the stereo RCA cable to the **Auxiliary Inputs** on the home theater system.

## DVD & CD

### Playing a DVD or CD

- 1 Press the **Power** button to turn the home theater system on.
- 2 Press the **Source** button to select DVD mode.
- 3 The loaded DVD or CD will start playing automatically.

### Programming a DVD or CD

- 1 Begin playing a loaded DVD or CD.
- 2 Press the **PROG/MEM** button on the remote.
- 3 Enter in titles and chapters (DVD) or tracks (CD) using the number keypad.

*Enter these in the order you wish to watch or listen to them in.*

### Entering the Setup Menu

To enter the setup menu, you must be in DVD mode.

- 1 Press the **Source** button to switch to DVD mode.
- 2 Press the **Setup** button to enter the setup menu.

### General Setup Options

- TV Display
- Angle Mark
- OSD Language
- Closed Captions
- Screen Saver
- Last Memory

### Audio Setup Options

- Analog Audio Setup
- Digital Audio Setup
- Dolby Digital Setup
- Channel Delay
- Equalizer

### Video Setup Options

- Video Output
- Color Settings

### Preference Page

To access the preference page, the home theater system must be in full stop mode or the disc drawer must be empty. Press the **Stop** button twice to enter full stop mode.

- TV Type
- Audio
- Subtitle
- Disc Menu
- Default

## RADIO

### Playing the AM/FM Radio

- 1 Press the **Power** button to turn the home theater system on.
- 2 Press the **Source** button to select radio mode.
- 3 Press the **AM/FM** button to switch between AM and FM radio mode.
- 4 Press the **PREV/TUN-/NEXT/TUN+** buttons to adjust the AM or FM radio station.

### Saving an AM/FM Radio Station

In order to see the current radio station preset, the home theater system must be connected to a television.

- 1 Follow the steps for Playing the AM/FM Radio.
- 2 When tuned to the desired station, press & release the **PROG/MEM** button on the remote.
- 3 Use the number keypad to enter in a preset (01-40) to save the current radio station to.

*When saving to presets 01-09, you must press the 0 button first.*

- 4 Press the **REW/M-** and **F.FWD/M+** buttons to cycle through saved radio stations.

### Auto Preset

In radio mode, you can press the **Search** button to auto scan and save radio presets.



## Company Information

### International Support

To download this User's Guide in English, Spanish, or French, visit the support section at [www.gpx.com](http://www.gpx.com).

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez [www.gpx.com](http://www.gpx.com).

### Contact Information

**Phone:** 1-888-999-4215

**Email:** [prodinfo@gpx.com](mailto:prodinfo@gpx.com)

**Parts Email:** [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

**Website:** [www.gpx.com](http://www.gpx.com)

### Green Initiative



Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marked the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction