


Quickstart Guide

Connectivity


Connecting your Subwoofer and Speakers

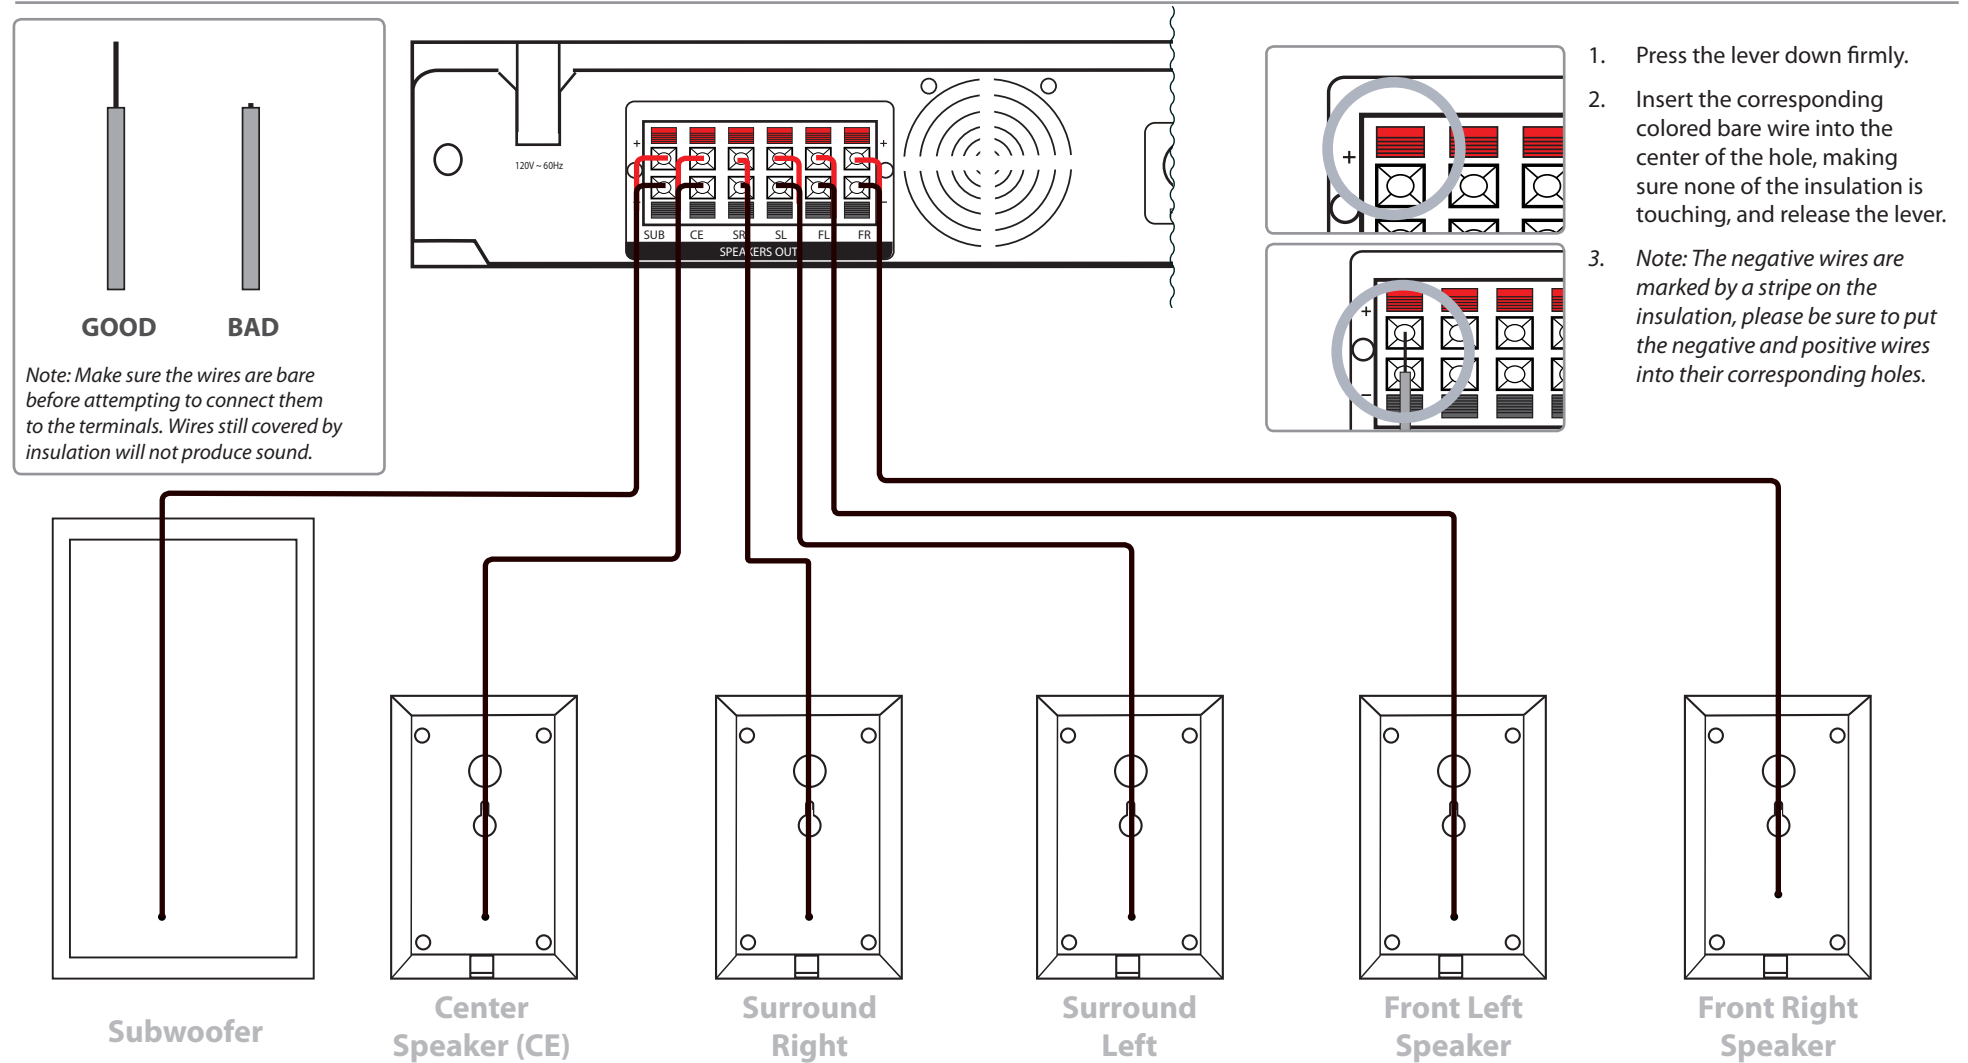

Quickstart Guide


Connectivity

How to Connect the DVD Player to a Television

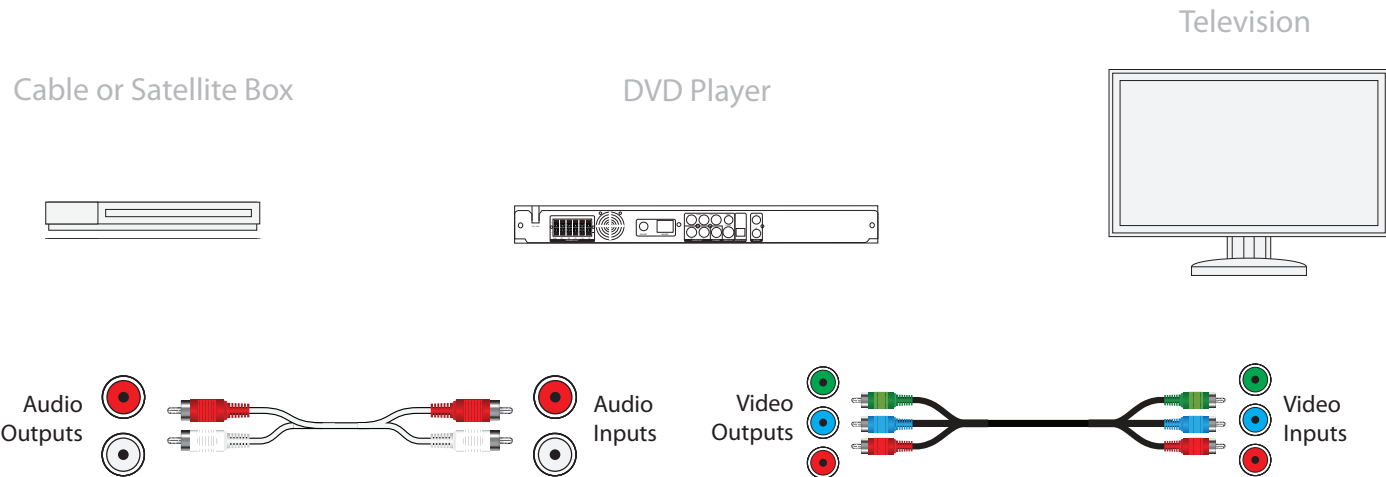

Troubleshooting

Some Speakers Not Producing Sound

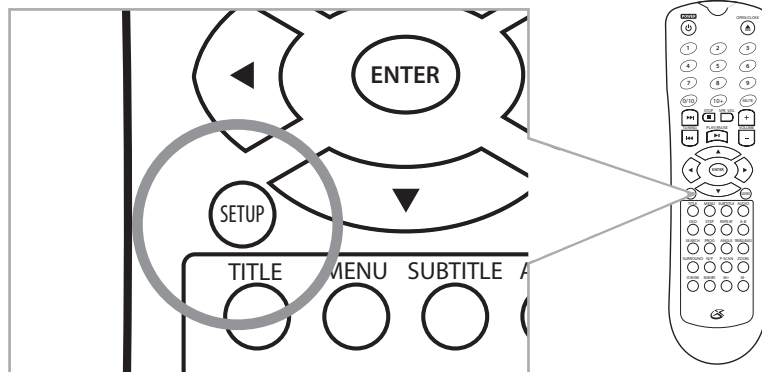

1. Press **Setup** button.
3. Select **Speaker Setup**.
4. Set **Downmix** mode to **Default**.