

End Table with Speaker & USB Phone Charger

User's Guide for Model DTSC300 v2521-01



Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in

a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings and Precautions

- **CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING: Shock hazard - Do Not Open.**
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet rest. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Do not ingest battery, chemical burn hazard.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov This product meets and complies with required Federal product guidelines.

Overview

Features

 
- Bluetooth wireless - range 59 ft.
- Voice prompts announce speaker functions
- Digital volume control
- 3.5mm Aux in
- USB charging port

Includes


- DC power adapter
- User's manual

Assembly

To install table legs screw the table legs into the table top clockwise until they are securely fastened. **Note: Table can hold up to 20kg.**

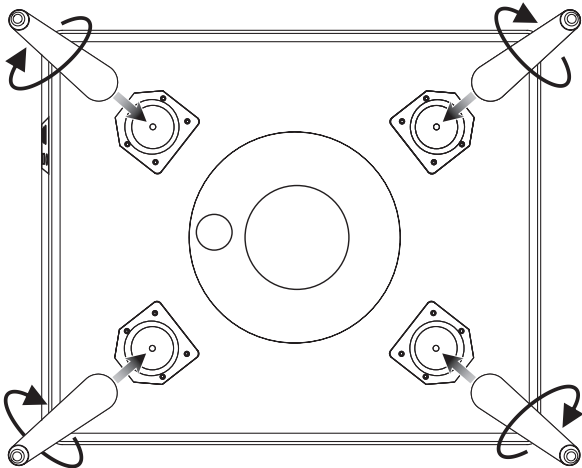


Control Panel

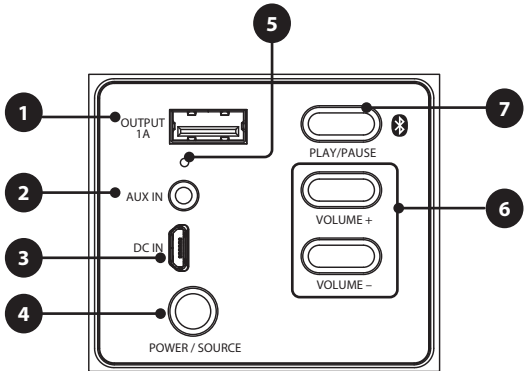 

1. **USB Charging Port**
2. **Aux in (3.5mm Input)**
3. **DC Power Input:** Use to power the speaker.
4. **Power/Source:** Press and hold to power ON/OFF. Press to change audio source between Bluetooth and Aux in.
5. **DC Input / Bluetooth LED:** Solid red light when plugged in. When the unit is unplugged the light will turn off. Flashing blue light when pairing. Solid blue light when connected to Bluetooth device. Solid purple light when in Aux in mode.
6. **Volume +/-**
7. **Play/Pause/Pair:** Press to play/pause a track. Press and hold for 3 seconds to manually pair to a Bluetooth device.

Powering The Speaker

 To power the unit, connect the DC Power Input on the speaker to a standard power outlet using an AC/DC power adapter.

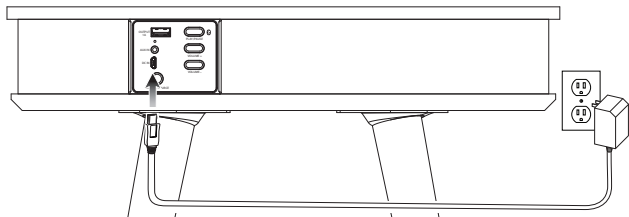

Bluetooth Wireless

 
Pairing & Playing Audio

1. When first powered on, the speaker defaults to Bluetooth Mode and is ready to pair automatically. When pairing, remain within 3 feet of the unit.
2. Using the controls on your Bluetooth device, select **DecorTech** in the Bluetooth settings to pair. If need be, refer to the user's manual for your specific device for more information.
3. When successfully paired, a voice will announce the connection.
4. Use the controls on the connected Bluetooth device to select and play audio. Use the speaker controls or the connected Bluetooth device to play, pause, and adjust the volume level.
5. After initial pairing, the speaker will automatically connect to the last Bluetooth device used whenever it is in Bluetooth Mode. Note: If your device should become unpaired or you find it is unable to connect, press and hold the **3** button to enter to Pairing Mode. A voice will announce, "Bluetooth is connecting," and you can connect to the speaker manually.

USB Charging Port

Plug your USB charging cable (not included) into the USB Charging Port on the speaker and the other end into your device and the device will begin charging.

Note: The USB Charging Port is only for charging mobile phones.

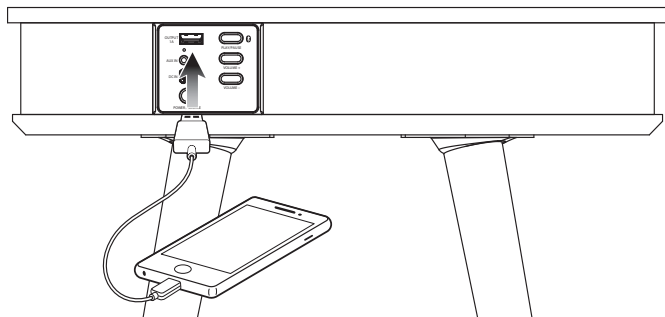


Aux In

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the **Aux In** on the unit and the **audio output/headphone jack** on an audio device.
2. Press **Power/Source** to switch to **Aux in** mode.
3. Use the controls on the connected device to select and play audio.

 Note: Newer phone models may require an adapter (lightning-to-3.5mm headphone adapter for iPhone,) or (USB-C to 3.5mm audio adapter,) for android.

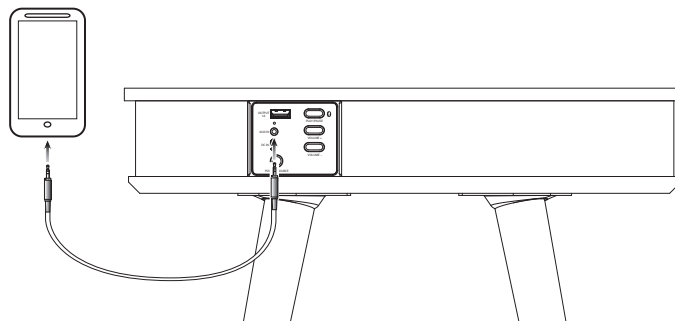

Customer Support

For Warranty Information, the most up-to-date version of this User's Guide or to download this User's Guide in English, French or Spanish, please go to: www.gpx.com

Customer Service: 1-888-999-4215

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Copyright © 2020 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

