

Mighty Shot

User's Guide for Model ICMD316 v3513-01



Features


- 720p resolution
- Photo files: JPG format (max resolution 720p)
Video files: AVI format (720p @ 30fps)
- Internal storage for up to 14 photos
- Rechargeable battery

Includes


- User's Guide
- USB to USB-C charging and data cable
- Chain
- Pouch

Controls and Functions


Top View

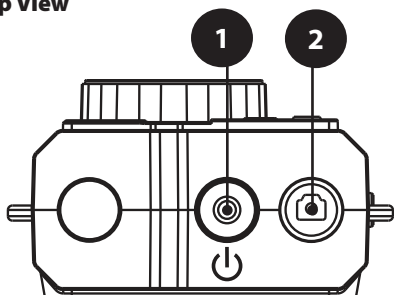


1. **Power:** Press and hold to turn on/off. Press once to switch between Camera/Video/Playback modes.
2. **Shutter:** In camera mode, press to take a photo. In video mode, press to start recording. Press again to end recording. Press and hold to enter the settings menu.

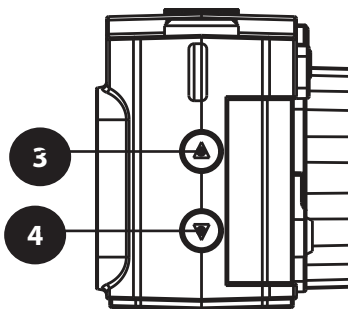

3. **Up:** In camera mode, press to switch filters. Press to scroll through settings options. In playback mode: Press to scroll through taken photos/videos.
4. **Down:** In camera mode, press to switch filters. Press to scroll through settings options. In playback mode: Press to scroll through taken photos/videos. Press and hold the down button to delete a file. Then press the shutter button to confirm.

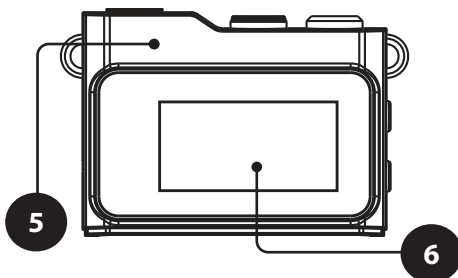

5. **LED Indicator Light:** Red while charging. Off when charged.
6. **Display Screen**

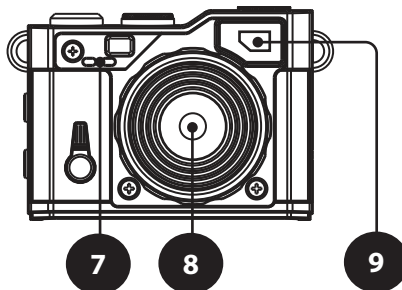


7. **Speakers**
8. **Lens**
9. **Flash**

Charging the Camera

Connect the USB-C to USB cable to the **DC Power Input** on the camera and a USB power adapter (not included) or a powered-on computer. When the camera is charging, the **Charging Indicator LED** will light up. When charging is complete, the **Charging Indicator LED** will turn off. Charge while powered off for best results.

Charge fully before use. The charge time is approximately 2 hours.

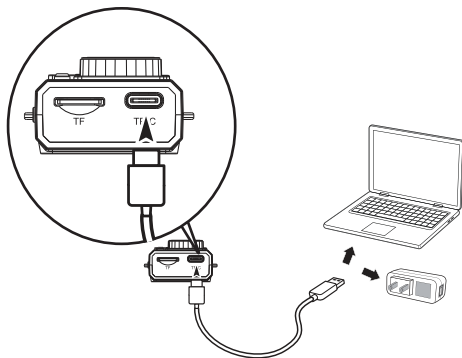


MicroSD

Supports MicroSD cards up to 32GB.

1. Insert a MicroSD card into the **MicroSD Slot**.
2. Photos taken with a MicroSD card inserted will automatically be saved to the card.

Note: When there is no MicroSD card inserted in the camera, all photos will be saved to the internal memory. The internal memory can store up to 14 photos. Photos saved to the internal memory cannot be transferred to a PC.

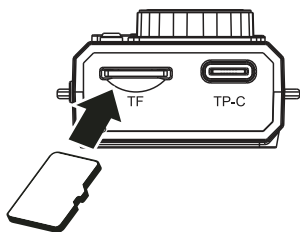

Cable Data Transfer

To transfer files, the camera must have a MicroSD card inserted. Connect the camera to a computer using the included USB-C to USB cable.

Note: Files stored internally on the camera (not on a MicroSD card) cannot be transferred.

Camera Settings

Press and hold the **Shutter** button to open the Settings Menu.

In the Settings Menu:

- Press the **Shutter** button to confirm.
- Press the **Up and Down** buttons to scroll through selections.
- Press the **Power** button to return to the previous screen.

Within the Settings Menu, you can adjust:

- Language
- Image Quality
- Video Size
- Volume
- Self-timer
- Fill Light (Flash)
- Date Stamp
- Date/Time Setting
- Format
- Default Setting (Reset)
- Version info



WARNING: Risk of cancer and reproductive harm from exposure to DEHP.

See www.P65Warnings.ca.gov

Customer Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iLiveElectronics.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Customer Service: **1-888-999-4215**

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Copyright © 2026 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



**Protect for Today
Sustain for Tomorrow**