 


Aux In

 
Requires a 3.5mm cable (included).

1. Connect the included 3.5mm cable to the Aux in port on the speaker. You will hear "Auxiliary" and the **Indicator Light** will flash slowly when the unit is ready.
2. Plug the other end into audio output/headphone jack on a media player.
3. Use the controls on the connected device to select and play audio.

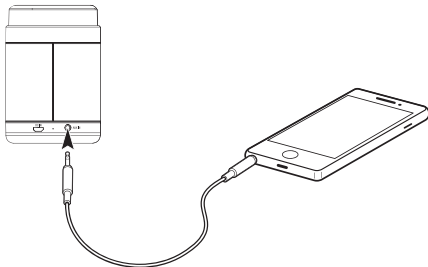

LED Lantern

1. To use the lantern light, use 2 fingers to gently tap the lantern sensor or tap the top of the lantern.
2. Tap once for high setting, twice for medium, three times for low and four times to turn the light off.

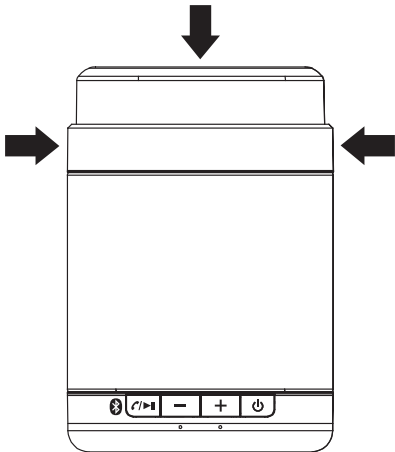

ADDITIONAL WARNINGS

- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- **WARNING :** Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.



WARNING : This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov. **This product meets and complies with all Federal regulations.**

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at:

www.iLiveElectronics.com

Para descargar este Manual del Usuario en Inglés, Español y Francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en:

www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en Anglais, Espagnol ou Français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur:

www.iLiveElectronics.com

Contact Information

Website: www.iLiveElectronics.com

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Phone Support: 1-888-999-4215

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to:
www.iLiveElectronics.com.



***Protect for Today
Sustain for Tomorrow***

Specifications are subject to change without notice.

Copyright © 2020 Digital Products International (DPI, Inc.)

All other trademarks appearing herein are the property
of their respective owners.



Portable Touch Light Wireless Speaker

User's Guide for Model ISB210 v2463-01

 
Features

 
- Supports Bluetooth
- Party Plus Mode
- Wireless range: 33 ft.
- Built-in microphone for hands free speakerphone
- Voice prompts announce speaker functions
- Micro-USB port for battery recharge
- DC battery power: built-in rechargeable battery
- Battery life: approx. 9 hrs at 50% volume (light off)

Includes

- USB charging cable
- 3.5mm audio cable
- User's guide

Overview & Controls

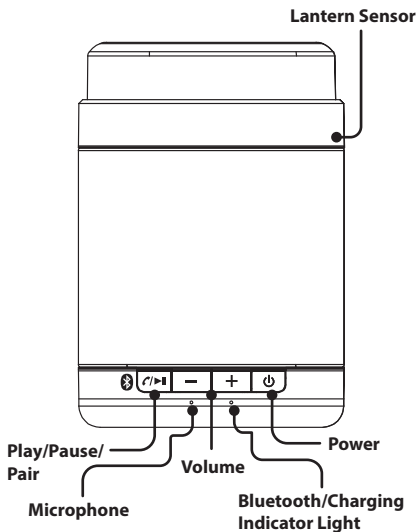

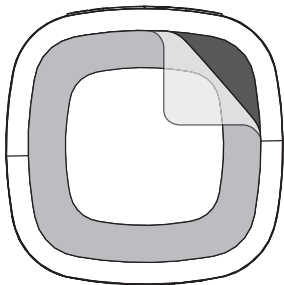


Remove the sticker on the bottom of the speaker.

Battery Power

Charge fully before use. The charge time is approximately 3 hours.

When the unit is charging, the **Charging Indicator Light** will display a solid red light. When charging is complete, the indicator will turn green.

 Using a **Micro- USB to USB** cable (included), connect the DC power input on the speaker to the USB port of a powered on computer or USB power adaptor (not included) to charge the speaker.

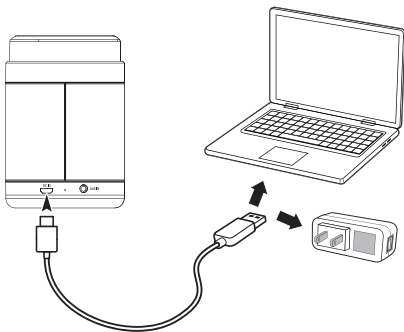

Pairing Bluetooth & Playing Audio

Note: This model features automatic Bluetooth pairing.

1. Power on the speaker, the **Bluetooth Indicator Light** will flash white, this means the speaker is ready to pair.
2. Using the controls on your Bluetooth device, select **ISB210** in the Bluetooth settings to pair. A voice will announce "Bluetooth is connected," and the light will turn solid white when the speaker is successfully paired to your device. *If need be, refer to the user's manual for your specific device for more information.*
3. Use the controls on the connected Bluetooth device to select and begin playing audio. Use the controls on the device or the speaker to play, pause, or answer an incoming call.

Note: The speaker will always try to reconnect to the last device used. To reconnect to a different device, press and hold the **Play/Pause/Pair** button until "Bluetooth is connecting," is heard. Access the Bluetooth settings menu on the device you wish to use and select **ISB210**.

Party Plus

If you have two **ISB210** Wireless Speakers, you can pair them together for stereo sound.

1. Power on both speakers one by one.
2. Make sure that both speakers are not connected to any Bluetooth device.
3. Press the **POWER** button once on one of the speakers and wait until you hear a beep indicating the 2 speakers are paired. *Note: this is now the dominant speaker.*
4. Pair your device to **ISB210** and audio can now be heard on both speakers.
5. To disconnect from Party Plus Mode, Press the **POWER** button on one of the speakers.
6. To reconnect again, quickly press the **POWER** button twice on the non-dominant speaker.