



POWER & BATTERY

To power the unit, plug the power cord on the back of the unit into a standard AC power outlet.

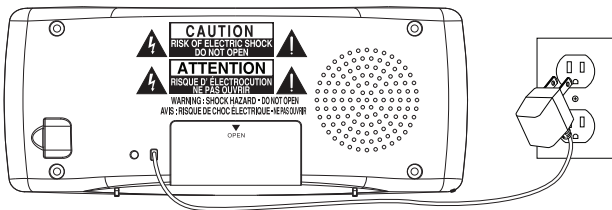

Requires 2 AAA batteries (not included).

The battery backup is intended for short power outages only. The clock radio's primary functions cannot run off of the battery backup alone.

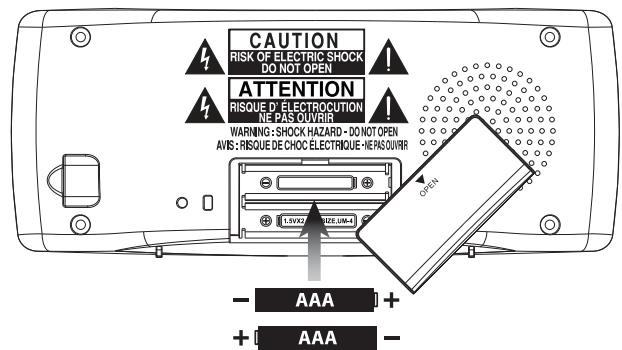

CLOCK AND SLEEP TIMER

Setting the Clock

1. If in radio mode, press and hold the **Power/Source/AI Off** button to turn the unit off.
2. Press and hold the **Clock/Mem** button until the display begins to blink, then release the button.
3. Press the **Hour** button to adjust the hour. *The PM indicator will light when the hour is set in the PM.*
4. Press the **Min** button to adjust the minute.
5. Press the **Clock/Mem** button to finish setting the time.

Setting the Sleep Timer

1. Press the **Snooze/Sleep** button repeatedly to set the sleep timer (90, 80, 70, 60, 50, 40, 30, 20, 10 min or OFF).
2. Once the set sleep time has expired the clock radio will automatically power off.

ALARM

Setting the Alarm

1. If in radio mode, press and hold the **Power/Source/AI Off** button to turn the unit off.
2. Press the **AL1 or AL2** button until the display begins to blink.
3. Press the **Hour** button to adjust the hour. *The PM indicator will light when the hour is set in the PM.*
4. Press the **Min** button to adjust the minute.
5. Press the **AL1 or AL2** buttons repeatedly to switch between Radio and Buzzer.
6. Once the set alarm time is reached, the alarm will sound.
7. To set the other alarm, follow the above steps and choose the alarm not currently set.

Disabling the Alarm

1. Press the **AL1 or AL2** buttons repeatedly until the indicator is no longer lit.

Snooze and Alarm Reset

After the alarm sounds:

Press the **Snooze/Sleep** button to delay the alarm for an additional 9 minutes.

OR

Press the **Power/Source/AI Off** button to turn the alarm off until the set alarm time is reached again.

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partinfo@dpiinc.com

Copyright © 2013 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

RADIO

Tuning the AM or FM Radio

1. Press the **Power/Source/AI Off** button to turn the clock radio on.
2. Press the **Power/Source/AI Off** button again to switch between the AM and FM radio mode.
3. Press the **Tun+/-** buttons to adjust the radio to the desired frequency.
4. Press and hold the **Tun+/-** buttons to search for the next available frequency.
5. Press the **Vol+/-** buttons to adjust the volume.
6. Press and hold the **Power/Source/AI Off** to turn the radio off.

Saving and Tuning to a Station as a Preset

1. Tune to the desired station.
2. Press and hold the **Clock/Mem** button to save the current radio station as a preset.
3. Press the **Clock/Mem** button to cycle through preset radio stations.

Radio Reception

An AM/FM antenna is built into the clock radio. To improve radio reception, adjust the position of the clock radio.

3.5 MM AUDIO INPUT

Using the Audio Input

Requires a 3.5 mm audio input cable (not included).

1. Plug one end of a 3.5 mm audio input cable into the **Line In** input on the side of the unit, and plug the other end of the cable into the audio output on an MP3 Player or other audio source.
2. Press the **Power/Source/AI Off** button to turn the clock radio on.
3. Press the **Power/Source/AI Off** to set the source to **Aux**.
4. Audio played through the connected device will now be heard through the speakers.

